


DIY SLATTED GARDEN GATE

VISIT FRANCOISETMOI.COM
FOR SUPPLIES + TOOLS LIST
AND GUIDED INSTRUCTION

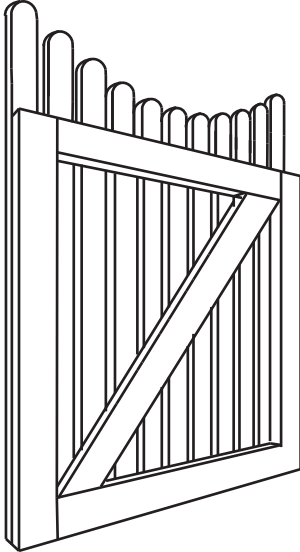


1. BUILD 2X4 FRAME WITH DIAGONAL SUPPORT. JOIN WITH WOOD GLUE AND 3" EXTERIOR POCKET SCREWS.

2. PREPARE SLATS. JIGSAW ROUNDED TOPS AND SAND CUT EDGES SMOOTH.

3. PLACE SLATS VERTICALLY IN CONCAVE POSITION ON FRAME AND CUT BOTTOM ENDS FLUSH WITH FRAME BOTTOM. ATTACH SLATS TO FRAME WITH 2" EXTERIOR WOOD SCREWS.


4. STAIN AND WATERPROOF GATE.

5. ATTACH HINGE STRAPS + LATCH.

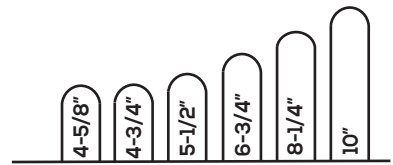


SLAT LENGTHS FOR CONCAVE DESIGN

CUT ROUNDED SLATS
WITH JIGSAW

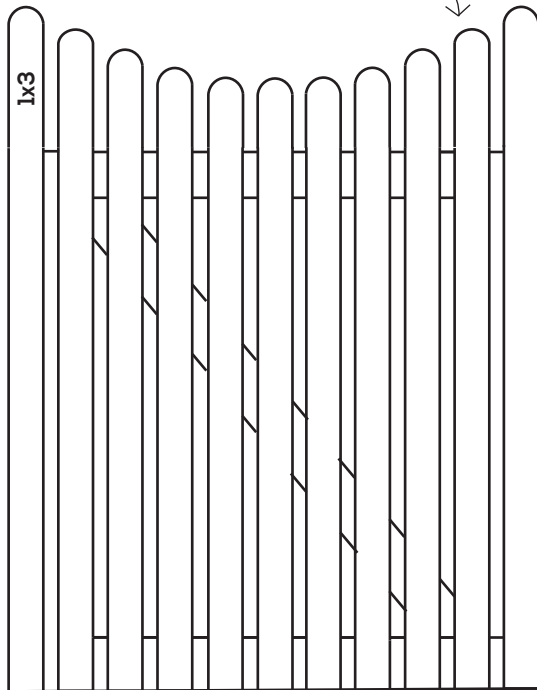

FRONT ELEVATION

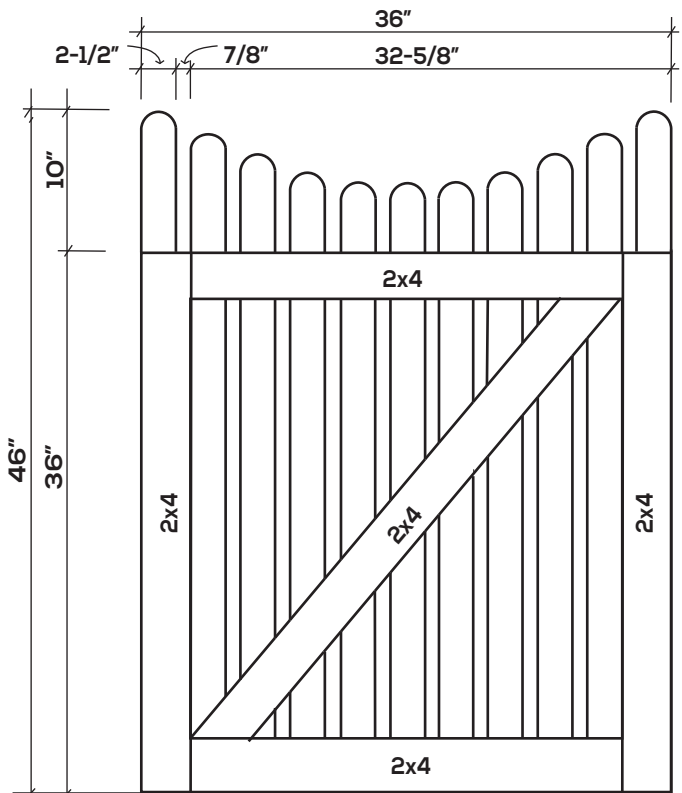

BACK ELEVATION